

NOTES ABOUT THE CHART:
 • X in the miter (MTR) column may require a miter cut and glue to create a corner moulding.
 • Use of T201, T202 and T203 may be recommended for removal and reinstallation of exposed edge parts.
 • GGG Corp provides this chart as a referral guide only.



Moulding Tools


GTOOL500

Cut mitred corners easily.
Precise mitred & straight cuts.



GGLUE

Use GGLUE to quickly bond the moulding together. Apply sparingly to the cut edge of the moulding. Press together and hold. GGLUE is especially formulated to bond Gold Glass Mouldings fast and is available in black.

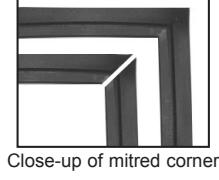

GTOOL201

for use with the T-201



2009 UNIVERSAL MOULDING APPLICATION CHART 1000's OF APPLICATIONS

Distributed By:

Original Line	T-105B	T-107B	T-108B	T-109B	T-105BFL	T-107BFL
Economy® Line	ET-105B	ET-107B	ET-108B	ET-109B	ET-105BFL	ET-107BFL
These mouldings are available in Original or Economy®	5/8" (17mm)	3/4" (20mm)	1" (25mm)	1 1/4" (31mm)	FEATURE LINE 5/8" (17mm)	FEATURE LINE 3/4" (20mm)
Other Mouldings Available	T-100B	T-101B T-101RB	T-110	T-120BC	T-201	T-202
	1/4" (7mm)	3/8" (10mm)	3/4" (20mm)	CHROME 5/8" (17mm)	Glass Urethane Rubber Moulding with adhesive	Glass Urethane Aggressive Adhesive
						Closed Cell Foam Mouldings go around tight radius corners on quarter & back glasses.

Sample Boards



Original T-BRD Economy® ET-BRD

YEAR	MODEL	W/S	B/G	QTR	MTR
1997 2003	ACURA CL	T105B	T107B		
1986 1993	Integra	T105B		T202	
2001 2006	MDX	T105B			
2007 2009	MDX	T105B			
2007 2009	RDX	T105B			
2005 2008	RL	T108B	T202		
2002 2006	RSX	T108B			
1996 1999	SLX	T108B			
1995 2009	TL	T105B	T107B	X	
2004 2009	TSX	T105B		X	
AUDI					
1988 1992	80	T100B	T100B		
1988 1995	90	T100B	T100B		
1989 1994	100	T100B	T100B		
1989 1991	200	T100B	T100B		
1984 1988	5000	T100B	T100B		
2002 2009	A4	T202			X
1996 2001	A4/S4	T100B	T202		
2008 2008	A5	T202			
1995 1998	A6	T100B	T100B		
1999 2004	A6	T202	T201		
2004 2006	A8L	T201	T202		
2002 2009	Allroad Quattro	T202	T201		
2007 2009	Q7	T202			
2003 2004	RS6	T202	T201		
2000 2007	S4	T202	T203		
1995 1995	S6	T100B			
2002 2009	S6	T202	T201		
2003 2003	S8	T202			
2007 2008	S8	T201			
2000 2008	TT Coupe	T202			
1990 1994	V8 Quattro	T100B	T100B		
BMW					
1992 2005	318/328	T107B			
2004 2005	5 Series	T105B	T201	X	
2004 2005	645/650				
2002	7 Series	T107B			
1999 2002	M Coupe / Roadster	T108B			
2000 2006	M3	T101B			
2006 2007	M6	T202			X
2004 2006	X3	T107B			
1999 2002	Z3 Coupe	T108B			
BUICK					
1982 2005	Century	T107BFL	T107BFL		
1985 1990	Electra	T105B	T107B		
2005 2007	LaCrosse	T101B	T101B		
1986 1991	LeSabre	T105B	T107B		
2000 2005	LeSabre	T101B			
2006 2009	Lucerne	T101			
1985 1988	Park Avenue	T105B	T107B		
1985 1996	Park Avenue	T107B	T107B		
1997 2005	Park Avenue	T108B			
1987 2004	Regal	T107BFL	T107BFL		
1991 1996	Roadmaster	T107B			
1982 1987	Skyhawk	T105B	T105B		
1986 1998	Skylark	T107B	T105B		
1985 1987	Somerset Regal	T105B	T105B		
CADILLAC					
1997 2001	Catera	T108B			
1982 1988	Cimarron	T105B	T105B		
2003 2007	CTS	T101B	T201		
1985 1993	Deville	T105B	T107B		
1994 1999	Deville	T108B			
1979 1985	Eldorado	T105B			
1986 1994	Eldorado	T105B	T105B		
1999 2006	Escalade	T108B			
2007 2009	Escalade/ESV/EXT	T201			
1985 1996	Fleetwood	T105B	T105B		
1985 1992	Fleetwood (RWD)				
1993 1995	Hearse	T107B			
1980 1987	Seville	T107B	T105B		
1991 1993	Sixty Special	T105B	T105B		
2004 2009	SRX	T201	T201	T202	X
2005 2009	STS	T201	T201		
CHEVROLET					
1985 2005	Astro	T105B			
2002 2006	Avalanche	T108B			
2007 2009	Avalanche	T201			
2004 2008	Aveo	T101B			
2009 2009	Aveo 5	T100B			
1987 1996	Beretta	T105B			
1997 2002	C Series Med Duty	T108B			
1987 1996	Camaro	T107B			
1987 1996	Caprice	T107B			
1982 1994	Cavalier	T105B	T105B		
1995 2005	Cavalier	T105B	T101B	X	
1982 1988	Celebrity	T105B	T107B		
1981 1987	Chevette	T105B	T105B		
2004 2005	Classic	T100B	T100B		
2005 2009	Cobalt 4DR	T201	T201	X	
2004 2009	Cobalt Coupe	T201	T202	X	
1987 1996	Colorado	T109B			
1999 2004	Corvette	T105B			
1987 1987	El Camino	T107BFL			
1981 1996	Equinox	T107B			
1987 2005	Impala	T105BFL	T201	X	
1994 1996	Impala SS	T107B			
1990 2001	Lumina	T107B			
1990 1996	Lumina APV	T107B			
1997 2003	Malibu	T101RB	T100B	T202	X
2004 2009	Malibu	T201	T201		
1988 2001	Metro	T105B	T105B		
1987 1996	Monte Carlo	T105B	T105B		
2000 2005	Monte Carlo	T105BFL	T105BFL		
1999 2000	Pickup	T108B			
1983 1994	S10 Blazer	T105B			
1995 2005	S10 Blazer	T108B			
1982 1992	S10 Pickup	T105B			
1994 2003	S10 Pickup	T108B			
1995 1996	Series 50-65-70				
2004 2008	SSR	T107B			
2007 2009	Suburban	T201			
1995 2006	Suburban	T201			
2007 2009	Suburban	T201			
1995 2006	Tahoe	T107B			
1998 1998	Tahoe	T201			
1999 2006	Tracker	T105B			
2002 2009	TrailBlazer / EXT	T105B			
CHRYSLER					
2005 2009	300	T101B	T201	X	
2008 2008	300	T100B			
1999 2004	300	T100B			
1996 2000	Cirrus	T100B			